



NO.	PART	DESCRIPTION
1	301002	TOOL BODY
2	301034	TRIGGER PIN
3	301500	TRIGGER HOLDER ASSEMBLY
4	301015	BOLT
5	305100	LINER
6	301014	ANNULAR SPRING
7	301013	BALL, ANNULAR SPRING
8	501107	STOP
9	301016	PUSH PIN
10	301048	DETENT BALL ASSEMBLY
11	305006	PISTON SLEEVE
12	305217	PISTON
13	301208	PISTON RING
14	305913	PISTON ASSEMBLY
15	305010	GUIDE
16	305009	BASEPLATE
17	301011	SHEAR CLIP
18	301300	SHEAR HOLDER
19	301023	SHEAAR
20	301024	SPRING, SEAR
21	301904	FIRING PIN ASSEMBLY
22	301026	SPRING, SEAR HOLDER
23	301025	SPRING, FIRING PIN
24	301028	PLUG
25	301028	RUBBER PAD ASSEMBLY